

© 2004 Hewlett-Packard Development Company, L.P.

Microsoft, Windows, the Windows logo, Outlook, and ActiveSync are trademarks of Microsoft Corporation in the U.S. and other countries.

HP iPAQ products are Powered by Windows Mobile™ 2003 software for the Pocket PC.

Getting started

HP iPAQ hx2000 series

First Edition (August 2004)

Document Part Number: 366425-021

# Contents

Getting started  
HP iPAQ hx2000 series .....

Sådan kommer du i gang  
HP iPAQ hx2000-serien .....

Aan de slag  
HP iPAQ hx2000 Series .....

Komme i gang  
HP iPAQ hx2000 .....

Aloitusopas  
HP iPAQ hx2000 -sarja .....

 
Komma igång  
HP iPAQ hx2000-serien .....

Congratulations on purchasing an HP iPAQ Pocket PC. This *Getting started* guide will help you set up your iPAQ Pocket PC and familiarize you with how it works.




Do not connect the Pocket PC to your computer until you have finished installing ActiveSync on your computer.

## 1. Install the battery

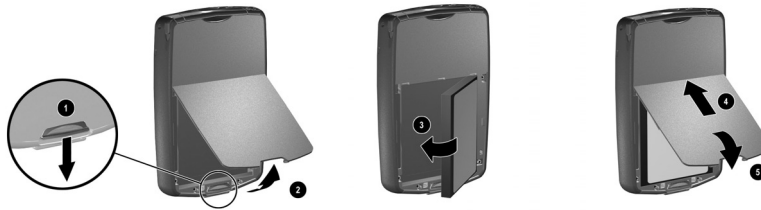

## 2. Charge the Pocket PC

Do not connect the Pocket PC to the computer at this time.

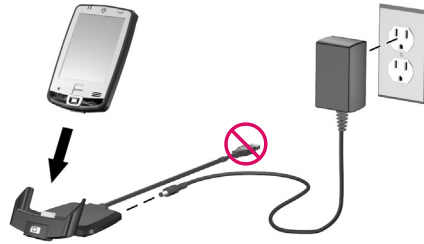

OR



**NOTE:** It can take up to four hours to fully charge the battery.

### 3. Power on

Press the **Power** button to turn on the unit.



### 4. Set up the device

When the Windows Mobile screen displays, lift the removable flip cover, tap anywhere on the screen, then follow the on-screen instructions until setup is complete.


### 5. Insert the Companion CD into the computer

Insert the Companion CD into your computer. Click **Start Here**. Follow the on-screen instructions.

The **Setup Wizard** installs:

- ActiveSync 3.7.1 (or greater)
- Microsoft Outlook
- Other optional software applications

## 6. Connect the Pocket PC to computer when instructed by Setup Wizard on the computer

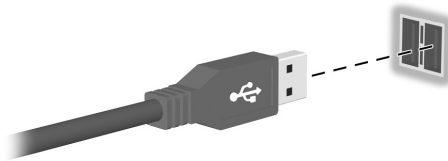

## 7. Establish a partnership

Follow the on-screen ActiveSync instructions to establish a connection between your Pocket PC and your computer.



Use ActiveSync to synchronize your calendar, tasks, contacts, e-mail messages, and favorite Web content between the Pocket PC and computer.

Click on the Microsoft ActiveSync icon on the computer desktop to view Help Topics and the ActiveSync Troubleshooter.

## Helpful Hints

### Power Saving

- Leave your device connected to AC power at all times when not using it.
- Dim the backlight. On the **Today** screen, in the **TodayPanel Lite**, use your stylus to adjust the **Backlight Brightness Level** slider, located under the **Light bulb** icon, halfway across to the **middle** position.
- Turn off the backlight. On the **Today** screen, tap the **Light bulb** icon > **Battery Power** tab; then set the backlight to turn off soon after you stop using the device.
- Leave the device set to turn off after not being used for a short period of time. On the **Today** screen, tap the **Battery** icon > **Advanced** tab. On battery power, set the device to power off in the shortest acceptable time.
- Turn off Wi-Fi and Bluetooth power when not in use. Tap **Start** > **iPAQ Wireless** > **ALL OFF** button.
- Set the device to receive incoming infrared beams manually. On the **Today** screen, in the **TodayPanel Lite**, tap the **Battery** icon > **Adjust beam settings to conserve power**, then uncheck **Receive all incoming beams**.
- Assign a program button to turn off the screen display while listening to music. Tap **Start** > **Programs** > **Windows Media** > **Tools** > **Settings** > **Buttons**. From the **Select Function** dropdown list, tap **Screen Toggle**. Press a program button and tap **OK**. Then, when listening to music, press that program button to turn off the screen display.
- Tap **Start** > **ActiveSync** > **Tools** > **Options** > **Mobile Schedule** tab. Select **Manually** for both Peak times and Off-peak times. Selecting automatic synchronization can cause your iPAQ Pocket PC to “wake up” regularly causing your battery to drain.

## Fingerprint Reader (not available on all models)

- Maintain a firm, consistent pressure against the sensor when swiping a finger. One way to do this is to press your thumb against the bottom of the iPAQ Pocket PC while swiping your index finger.




- For best results, refer to “How Do I Use the Fingerprint Reader on my Pocket PC?” in the printed *How Do I...?* guide.





**NOTE:** Not all models or features available in all regions.

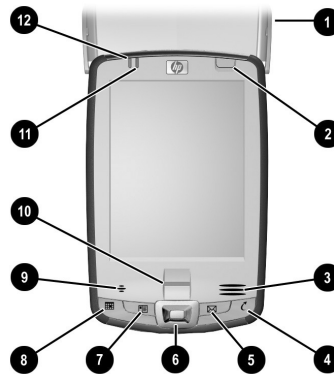

## Front panel components

- 1 Flip cover:** Lift the flip cover before tapping on the screen
- 2 Power button:** Turns unit on and off
- 3 Speaker:** Listen to notes or music
- 4 iTask button:** Open, close, and switch between applications, run utilities, and change settings
- 5 Messaging button:** Access your Inbox for sending and receiving e-mail  
**iPAQ Wireless\*:** Launches iPAQ Wireless application
- 6 5-Way Navigation button:** Scroll through a list and push to select (similar to using a joystick)
- 7 Contacts button:** Display a list of your contacts from the category you select  
**HP ProtectTools\*:** Launch security application

*(Continued)*

## Front panel components *(Continued)*

**8 Calendar button:** Schedule appointments, set reminders, or view your calendar  
**Landscape/Portrait\*:** Switch between landscape and portrait display modes


**9 Microphone:** Speak into the microphone to record notes

**10 Biometric Fingerprint Reader:** Authenticate access to your device

**11 Charge/Notification LED indicator:**  
LED off = not charging or no notifications  
Amber flash = charging  
Green flash = one or more notification events have occurred  
Amber solid = charging complete


**12 Wireless LED indicator:**  
LED off = Wi-Fi and Bluetooth are both off  
Blue flash = Wi-Fi and/or Bluetooth are on

**\* To access this function, press and hold for two seconds.**

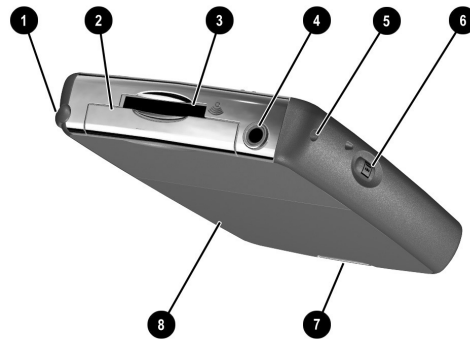

## Top, back, and side panel components

- 1 Stylus:** Use to input information. Slide up to remove, slide down to replace
- 2 Type II Compact Flash (CF) slot:** Supports CF Type I or Type II expansion cards
- 3 Secure digital expansion slot:** Supports Secure Digital (SD) and MMC memory cards and SDIO expansion cards
- 4 3.5 mm stereo headphone/headset jack:** Supports standard 3.5 mm headphones or headsets
- 5 Removable flip cover hinge:** Connects the removable flip cover to the iPAQ Pocket PC
- 6 Record button:** Record voice or sound
- 7 Battery release latch:** Pull out to release battery
- 8 Battery cover:** Remove to install or remove the battery

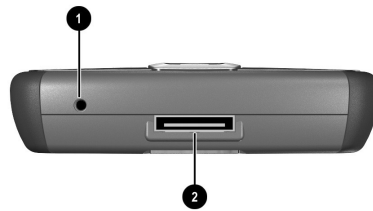

### Bottom panel components

- 1 Reset button:** Push the stylus into this hole for a soft reset of your Pocket PC
- 2 Universal sync connector:** Connects to HP desktop cradle, AC adapter, and USB synchronization cable



### HP desktop cradle (not included with all models)

Connects to the Pocket PC for charging and/or synchronizing and serves as a recommended home for your Pocket PC when it is not in use

## Learning more about the Pocket PC

---

**for information on... see this source...**

---

Using your Pocket PC	<i>HP iPAQ hx2000 series Pocket PC User's Guide</i> located on the Companion CD. For on device help, tap <b>Start</b> , and then <b>Help</b> .
Bluetooth and Wi-Fi connections	<i>HP iPAQ hx2000 series Pocket PC User's Guide</i> located on the Companion CD
Additional programs that can be installed on your Pocket PC	Companion CD
Safety precautions	<i>Important Safety Information</i> document on the Companion CD
Global limited warranty	<i>Global limited warranty and technical support</i> document in the box
HP iPAQ accessory products	Accessories information brochure included with your Pocket PC and on the Companion CD, or <a href="http://www.hp.com/go/ipaqaccessories">http://www.hp.com/go/ipaqaccessories</a>
Support for your Pocket PC	<a href="http://www.hp.com/support">http://www.hp.com/support</a>
Worldwide telephone support phone numbers	<a href="http://www.hp.com/country/us/eng/wwcontact.html">http://www.hp.com/country/us/eng/wwcontact.html</a>
Registering your HP iPAQ to receive e-mail from HP regarding special offers and promotions	<a href="http://www.register.hp.com">http://www.register.hp.com</a>

---